FRONT FENDER FRONT APRON (ASSY)

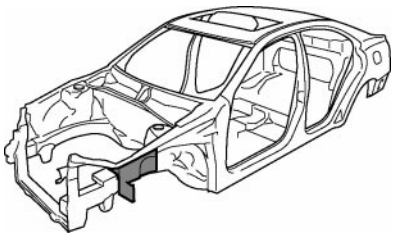

F25874A

With the radiator upper support removed.

Symbol meaning

REMOVAL	A M I : Remove Weld Points	: Cut with disc sander, etc.
INSTALLATION	O M I : MIG Plug Weld	: Tack Weld

F25874B

REMOVAL·INSTALLATION

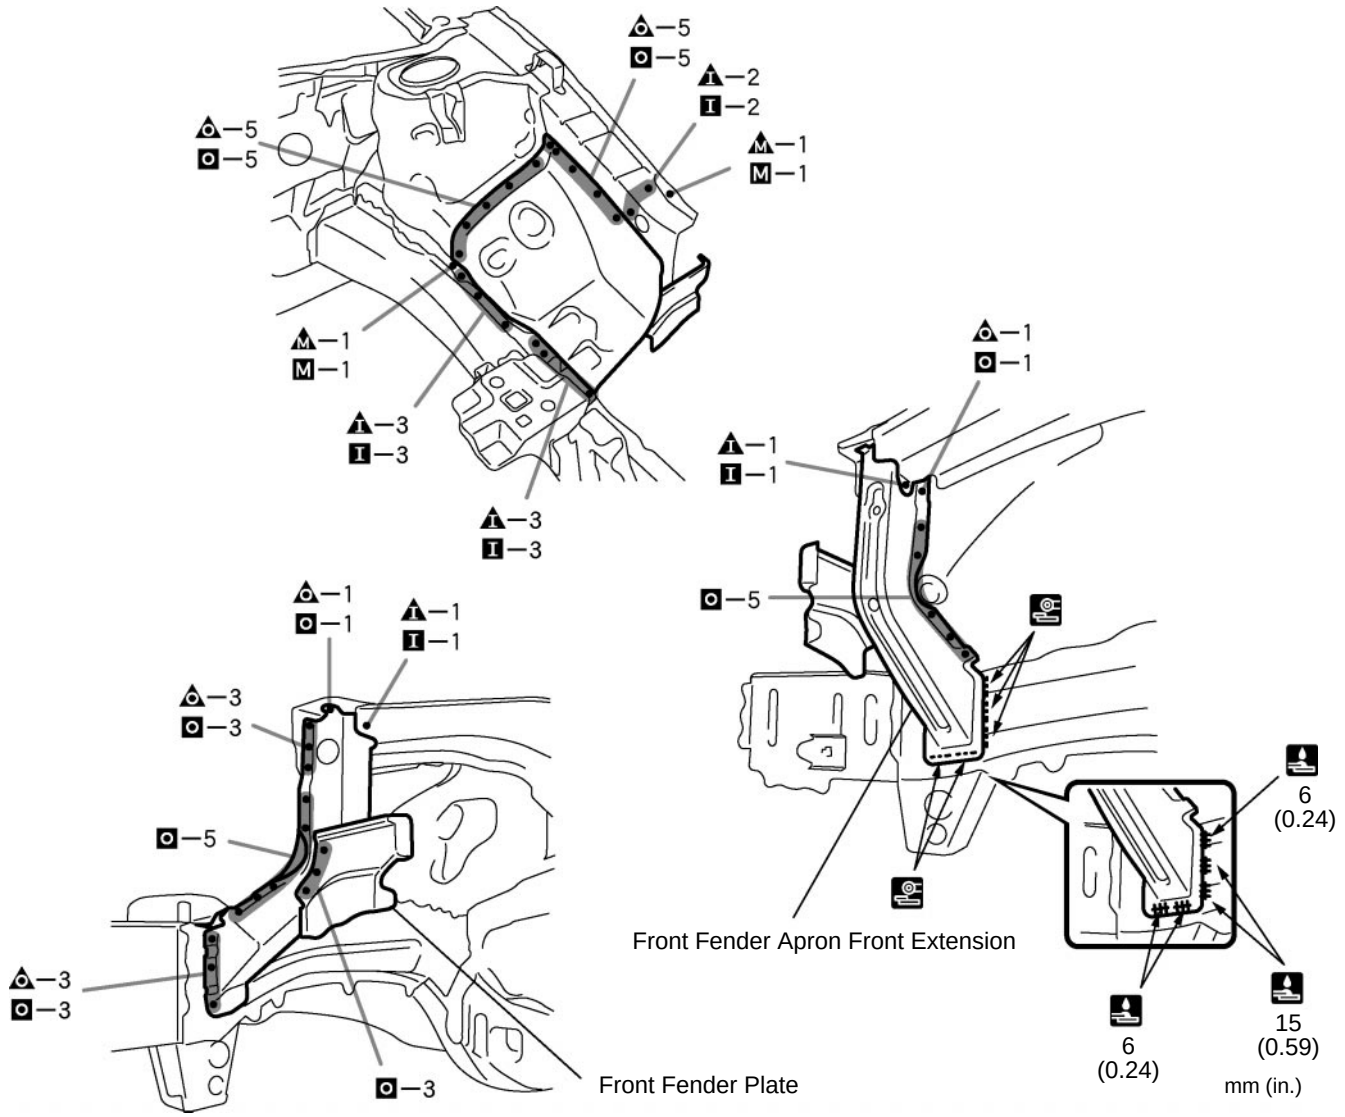

F25874

REMOVAL POINT

1 Remove the front fender apron front extension at the same time.

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint·coating)
4 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.